Instruction Manual



(EN) Current Monitoring

Features

- Single phase current sensor for monitoring AC current
- Input voltage range from 24 to 240 VAC
- Timing Capabilities from 0 10 sec
- 2 LED Status Indicators
- DIN Rail Mountable
- Only 17.5 mm Wide
- Works with external current transformers

2249-02-001-Rev.:0


2247-02-001-Kev..0

This device is designed for connection of 1-phase main 12-240 VAC and must be installed according to norms valid in existing state. Connections to this device must be made according to the details in this instruction sheet. Installation, connection, setting and servicing should be installed by qualified electrician staff only, who understands this instruction sheet and functions of respective device.


Before starting installation ensure that the main switch is in "SWITCH OFF" position and there should be no power going to the device. Qualified installer must also ensure the device is being installed into a temperature controlled environment which will guarantee not to exceed the specified maximal operating temperature. For installation and setting use a screw-driver with 2 mm tip.

Description

The Current Sensor Series is a complete current sensing solution in one modular package which mounts directly to a DIN rail. This product allows the user to monitor the current of one circuit (1 to 8 amps) and switch another circuit in case of an over current or under current condition. The built in time delay feature allows the user to accurately switch the output anytime between 0 to 10 seconds after the preset current monitoring condition is violated. Also, has the capability to extend the sensing range up to 600. A through the use of current transformers.

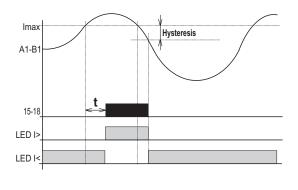


Product Layout

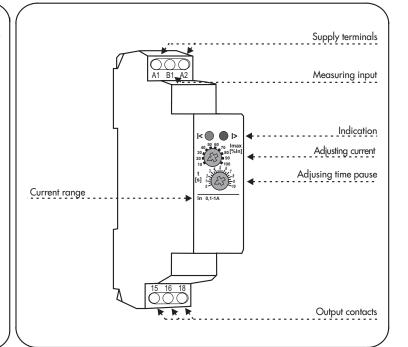

Connection

Description of control components

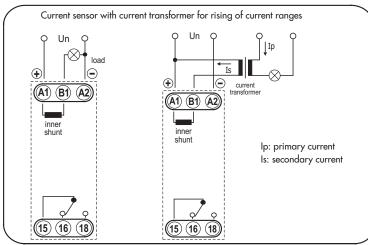

40 50 60 70 lmax 30 80 [%ln] 20 90

Setting current in % of range.

It's overpassing is indicated by switching on relay and shine of red LED diode.



Setting of delay - delay of output reaction to overpassing setting current.

Relay contact	Load								
16 A		=====	⊣ ∓(70µF		AC1	AC3	AC15	DC1 (24/110/220 V)
AgNi	1000 W					4000 VA	0.9 kW	750 VA	16 A/0.5 A/0.35 A

While installing the device follow the instructions in this manual and on the cover packaging of the device. Do not operate he device out of the specified range of technical parameters. Installation and launching can be done only by a person with an adequate electro-technical qualification. who is accredited for this work and is informed about this manual and functions of this device. The person who executes the installation is responsible for correct and sole installation of this device. Keep in mind that it is soll electronic or the device when mounting. Non problematic function of the device also depends on the previous way of transportation, storing and handling. If you find any sign of damage, deformation, malfunction or a missing part, do not install this device and claim it at its seller. After the expiry date of the product it is possible to demount, recycle, and store it at protected damping site.

- 1) Protection of the device
- -the device contains protections against over-voltage peaks, and disturbing pulses in the main. To ensure correct function of these protective elements, suitable protections of higher degree (A,B,C) must be mounted into the installation, and screening of switched devices (contactors, motors, inductive loads etc.) must by applied.
- it is convenient to ensure protection of the device by adequate elements of over-current and ever-voltage protection fuses, surge voltage protector 2) Operating conditions
- while installing this device it is necessary to consider temperature rate of ambient devices so the operation temperature stated in technical parameters is kept. It is necessary to ensure air circulation so the operation temperature is not exceeded in any case.

 to ensure the stated operating life and correct function of the device, it is not recommended to expose these to extreme influences that can negatively effect correct function of the device permanent exposure to temperatures (see technical parameters), aggressive evaporations, chemicals, high relative humidity above 95%, strong electromagnetic field of microwave radiation etc.
- it is necessary to avoid placing devices close to sources of electromagnetic disturbances to ensure their correct function
- all our products are in compliance with requirements of EMC (electromagneticimmunity and resistance) and in occordance with governmental regulation. However it is necessary to pay attention while connecting products to the circuit with appliances that create electromagnetic disturbances (conductors, motors), or power cables close to them. It is recommended to have the connecting product into a circuit with conductors or motors, it is necessary to protect the product by adequate external protective elements RC elements, varistors or surge voltage protectors 3) Handling the device and its use
- wdriver with an approximate width 2 mm for installation and setting
- -do not use brute force to screw input terminals (maximally 0,5 N/m), do not put exceeded pressure on to the holding parts of terminals so the inner construction of the device is not damaged.
- protect the device against falls and excessive vibrations do not overload relay output contacts, mainly while using loads of another category then AC-1
- if contacts of relay melted while switching big loads, it is necessary to use an inserted contactor or power relay rated for required load in the current installation.

Description of protective elements in devices

All limers and monitoring relays in our assortment are equipped by protective elements against possible over-voltage in the main. The nominal voltage of the applied varistors is 275V. During short-time over-voltage peaks, the varistor lowers its leakage resistance and accumulates the grown over-voltage peaks. In case this over-voltage has a character of short-time peak, varistor is able to read repeatedly this way and thus non-destructively protect a device against these negative influences. Other protective elements that are used in devices are transits a zener diodes, that eliminate over-voltage pulses, and are installed in supply and input circuits of the device (for example when switching inductive loads). In case of switching loads of inductive character it is recommended to separate supply of output elements (motors, contactors, etc.) from supply of monitoring and controlling inputs of the device.

Specifications

Supply terminals:	A1 - A2				
,					
Supply voltage:	AC 24 - 240 V (AC 50 - 60 Hz)				
Consumption:	max. 1.5 VA				
Supply voltage tolerance: <u>Measuring circuit</u>	-15 %; +10 %				
Load:	between A2 - B1				
Current range:	1 AMP AC 0.1 - 1 A 2 AMP AC 0.2 - 2 A				
applicable also for current transformer	5 AMP AC 0.5 - 5 A 8 AMP AC 0.8 - 8 A				
Current adjustment:	potentiometer				
Max. permanent current / Inrush overload <1ms:	1 AMP 1 A / 2.5 A 2 AMP 2 A / 2.5 A 5 AMP 5 A / 6.3 A 8 AMP 8 A / 20 A				
Time delay:	adjustable, 0 - 10 sec				
<u>Accuracy</u>					
Setting accuracy:	5 %				
Repeat accuracy:	<1 %				
Temperature dependancy:	< 0.1 % / ℃				
Limit values tolerance:	5 %				
Hysteresis (fault to OK): <u>Output</u>	0.6-1.2 % of the range				
Number of contacts:	1x changeover, (AgNi)				
Rated current:	16 A / AC1				
Breaking capacity:	4000 VA / AC1, 384 W / DC				
Output indication: Other information	green / red LED				
Operating temperature:	-20 +55 ℃				
Storage temperature:	-30 +70 ℃				
Electrical strength:	4 kV (supply - output)				
Operating position:	any / wahlfrei				
Mounting:	DIN rail EN 60715				
Protection degree:	IP 40				
Overvoltage cathegory:	III.				
Pollution degree:	2				
Max. cable size:	max. 2.5 mm²/with cavern 1.5 mm²				
Dimensions:	90x17.6x 64 mm				
Weight:	57 g				
Standards:	UL Listed, EN 60255-6, EN 61010-				

Dimensions

